




KNOCKONWOOD

jaga

Energy SAVERS

Montaj talimatları / Instructions de montage
Montagehinweis / Mounting instructions

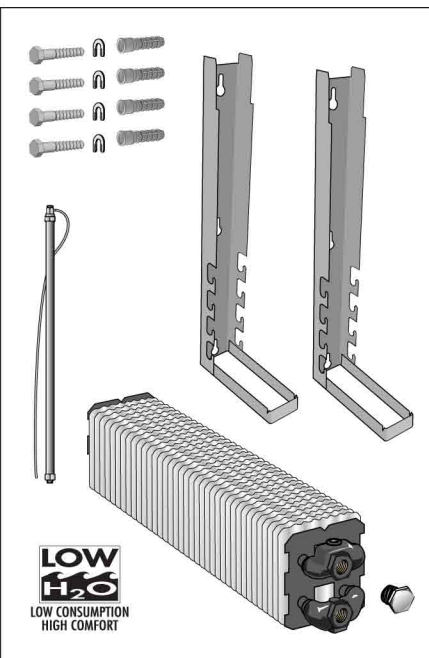

VANA OPSİYONLARI

VENTILEN_VANNES_VENTILE_VALVES

code 5090.1104
code 5090.1111
code 5090.1110
code 5090.1119




5090.402 + 5090.105 5090.10501 5090.10502










BOYUTLAR_DIMENSIONS_ABMESSUNGEN_DIMENSIONS

BOYUTLAR cm				
Type	B	d	h min*	h min**
06	10.8	4.6	10	5
10-11	12.8	5.2	10	5
15-16	17.8	7.7	12	5

Code	X	Y
5094.414	1.2	3.8
5094.402	2.7	5
5090.405	2.7	5
5090.402	2.7	5
5090.407	2.7	5
5090.130xxx	2.7	5

* Daha kısa mesafeler kapasiteyi düşürebilir.
* Des dimensions inférieures peuvent diminuer légèrement l'émission de chaleur.
* Kleinere Abstände verändern geringfügig die Wärmeleistung.
* Smaller dimensions can decrease output.

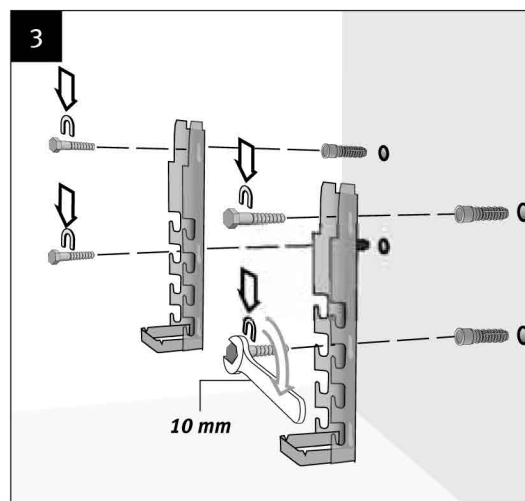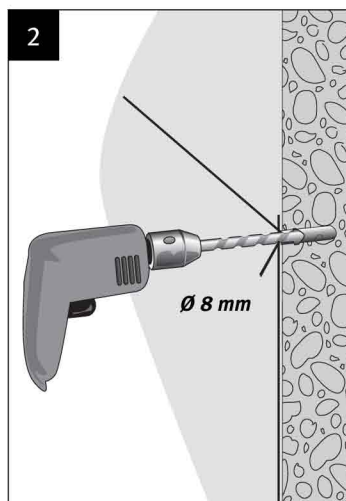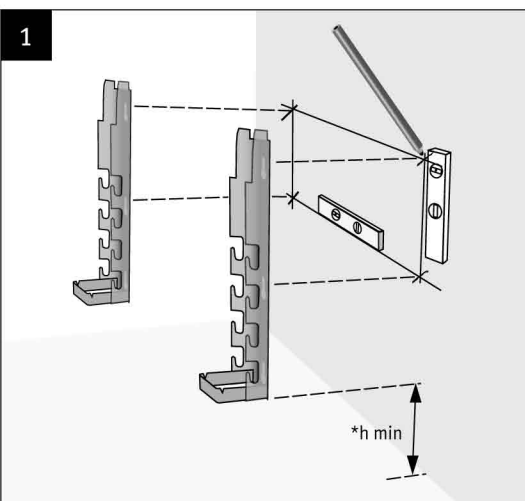

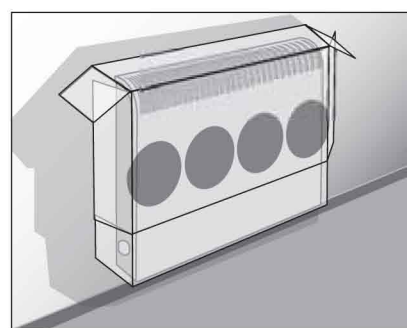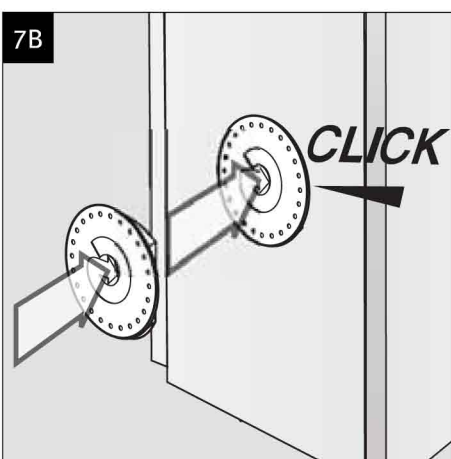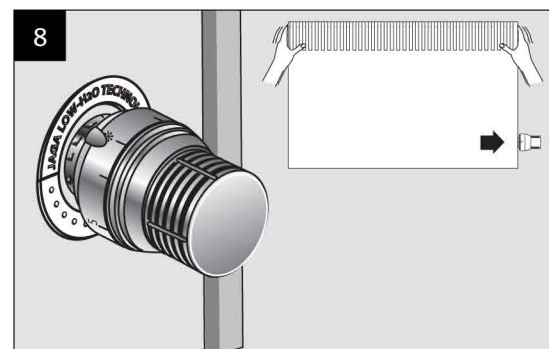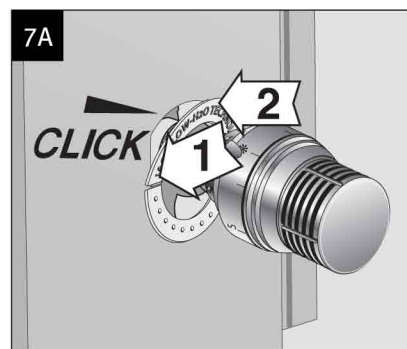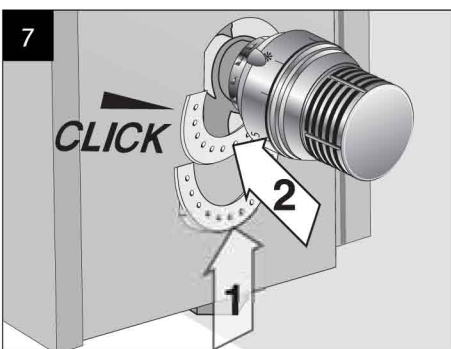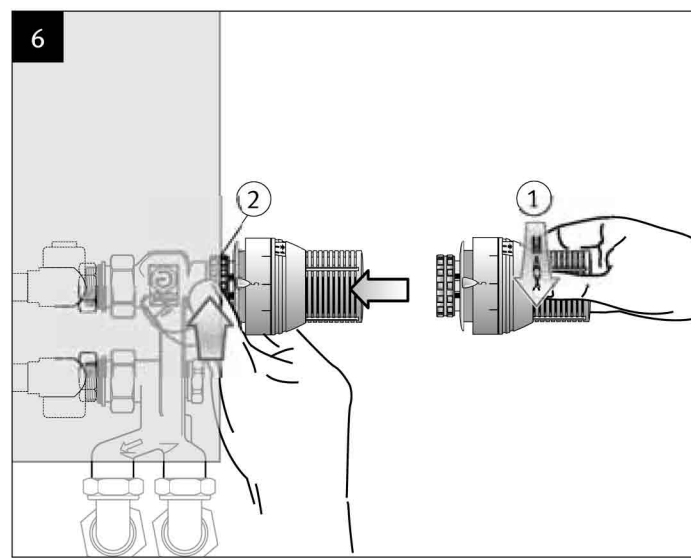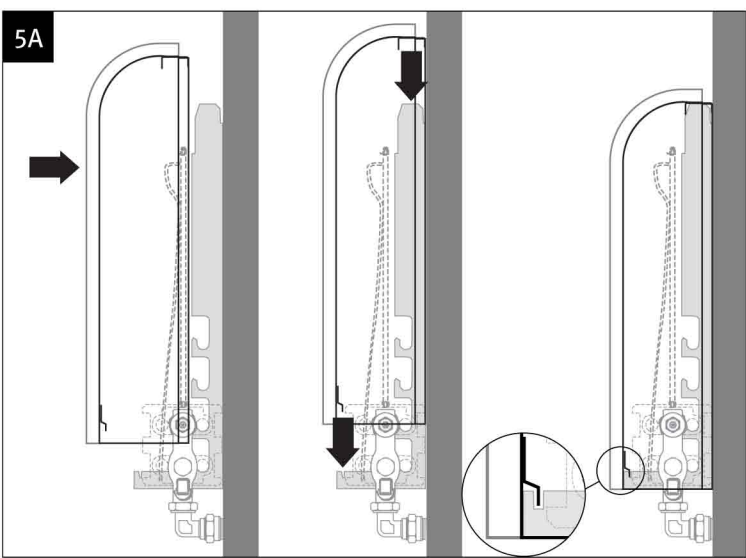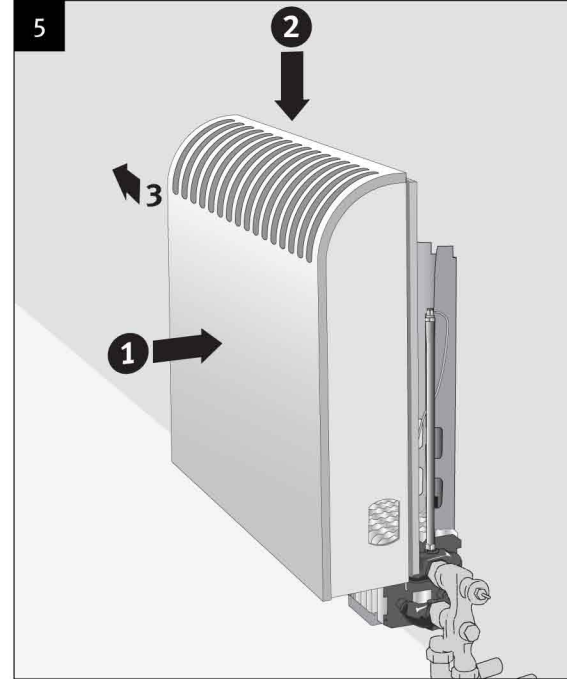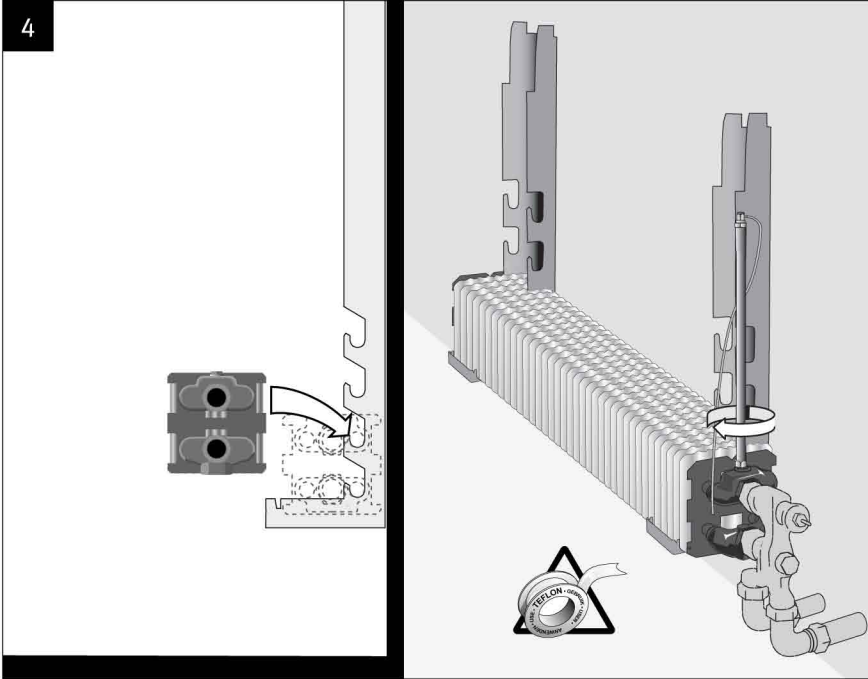

OK!



- Kutuyu montajdan sonra radyatörü korumak için kullanın !